

FCC Compliance

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Additionally, the installation of a grounding cable is recommended.
- Consult the dealer or an experienced radio / TV technician for help.

Changes and modifications not expressly approved by the manufacturer or registrant of this equipment can void your authority to operate this equipment under Federal Communications Commission's rules.

Installation guide for grounding cable



In order to attach the grounding cable to your STEPCRAFT CNC machine, please remove the screw either on the left or on the right side of the control bar on the control retaining plate. Onto this screw you firstly slip the eyelet of the grounding cable, then the serrated lock washer. Now, please reattach the screw to the place at the control retaining plate where it has been removed.